

eCigWorld CE6 / CE5 PERSONAL VAPOURISER INSTRUCTIONS

Congratulations on your purchase of this eCigarette Starter kit! The following are some basic instructions on handling, use and care of your eCig Starter Kit equipment. **Please read this guide completely before using your device.**

Please also ensure the batteries are fully charged before your first use. The battery is locked when shipped (see charging and unlocking instructions below).

General Kit contents

- eGo/510 compatible Normal or Variable Voltage (either 4 click VV or VV Twist) batteries
- clearomisers AKA Tank to fill eliquid
- USB charger lead with LED indicator
- Australian wall plug for USB cable depending on Kit or buy as an extra optional
- eliquid optional extra
- Carry case

How to Filling/Refilling the clearomiser

CE6 / CE5 / GT are Top filling clearomiser i.e. you take out mouth piece and fill it from there. Where as Protank, Aerotank, Nautilus etc are bottom filled clearomiser

Unscrew the clearomizer from the battery if your kit has arrived assembled. Always screw/unscrew clearomisers from their base rather than the main body. Then unscrew the clearomiser mouthpiece.

Drip or syringe 1.6ml maximum (less if refilling as wick holds some juice even when the clearo is empty) into the tank while holding it at an angle slightly off vertical. Do not fill past the 1.6ml mark and do not allow liquid to enter the hole on the center post inside the clearomiser.



Once filled, screw the mouthpiece back on, being careful not to cross thread or over-tighten.

Assembly

Screw the clearomiser into the battery. Be careful not to cross thread or over-tighten.

NOTE: Over-tightening chargers, clearomizers and atomizers can damage a battery. Carefully screw on these components until you begin to feel resistance; then apply a maximum further one-quarter turn.

General Usage

For more guides, hints and tips; visit www.eCigWorld.com.au

When you receive the battery, it will be locked (see unlocking instructions below). Once unlocked, simply hold down the button as you take a draw. This activates the device and creates the vapor. Release the button just prior to the end of your draw.

Battery locking (ON / OFF) feature

The batteries have a button operated lock; which prevents unintended activation of the battery. Batteries are shipped locked. To turn the battery on, click the button rapidly 5 times. The LED will then flash 3 times indicating it is now in standby mode; ready to use. To switch off, click the button 5 times. The LED will flash 3 times and then the battery will be locked.

Variable voltage feature using 4-CLICK Button

Some eliquids vape better at a lower voltage and some higher - and "better" can be somewhat subjective; so having this feature allows you to choose what's right for you.

To change voltages is very simple - 3 rapid button clicks takes you to the next setting. The current setting is indicated when you press the button by the colour of the LED light. Green signifies the low voltage (~3V), blue medium (~3.6V) and red, high (~4.2V). We recommend trying your juices at the low setting (green) first as this is also the most energy efficient and will provide the longest battery life between recharges. The "normal" setting is 3.6V (blue).

Variable voltage using Twist Nob at the bottom - VV Twist / Vision Spinner / Aspire CF Batteries

Variable voltage Twise batteries have a nob dialer at the bottom of the battery which can be turned/ twisted to set it at desired voltage setting These batteries are lot easier to change the voltage setting. Vision Spinner, Spinner 2, Aspire CF VV, Aspire CF VV+ have twist dialer.

IMPORTANT: Only use the eCigWorld supplied 420mA charging lead and USB plug. Using other chargers may damage the device and create a fire risk.

Please fully charge the battery before use.

Ensure the battery's connector is dry and clean before connecting to the charger. The battery is connected to the charger by screwing it into the device. Take care not to cross the thread or over-tighten.

NOTE: Over-tightening chargers, clearomizers and atomizers can damage a battery. Carefully screw on these components until you begin to feel resistance; then apply a maximum further one-quarter turn.

The battery will take 3.5 - 4.5 hours to recharge from flat using the USB wall plug. We strongly recommend the use of the USB wall plug.


The battery includes IC (integrated circuit) protection on the PCB (Printed Circuit Board), which prevents over discharge, over charge and over current. The battery charger lead will automatically switch to standby (green) once the appropriate voltage has been reached.

Please note that the USB wall plug LED will remain the same colour, regardless of charging stage. The wall plug also contains safety features in its circuitry.

Regardless of the safety features, a charging battery is a fire risk. You should not leave a charging battery unattended and the battery should be removed from the charger as soon as the cycle is complete.

Changing atomizer heads CE5/ CE6/ GT

The atomizer head inside the clearomizer should last a couple of weeks under fairly consistent use. Once vapour production decreases or juices start tasting a little odd; it's a good sign the head needs changing. Spare heads are available from eCigWorld. The head change is a simple process:

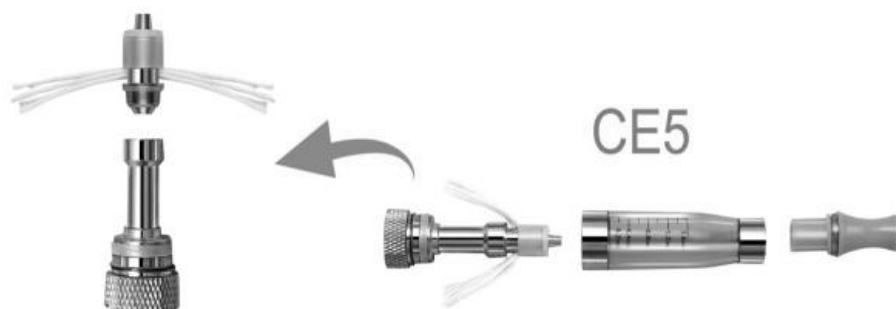

IMPORTANT: General care

Like any electronic device with a lithium battery, some basic safety precautions should be taken; with some extra points with regard to vapourisers. Don't hesitate to contact us for clarifications.

- Only use the eCigWorld charging lead specific to your battery and AU approved wall plugs.
- Keep the battery dry and clean the battery connector with a cloth before charging.
- Do not expose to extreme heat - such as leaving in the car on a hot summer's day.
- Never charge a battery unattended and check battery regularly while charging.
- If battery becomes hot when charging, remove from charger immediately and contact us.
- Remove battery from charger as soon as charging cycle is complete.
- Do not use cartomizers, clearomizers and modifications not suited to the battery.
- Only use standard resistance cartomizers and clearomizers
- Batteries should be rested for an hour after charging.
- Avoid dropping a battery and do not subject it to other forms of shock.
- Use the battery button lock when not in use.
- More performance and safety tips available at www.eCigWorld.com.au.

If you should experience any difficulties with your equipment, we want to know about it. Please don't hesitate in contacting us via the eCigWorld.com.au web site – our goal is to have happy customers 😊

Warning:

eCigWorld products are not intended for non-smokers and we recommend medical supervision when using vaping products. Our products are not intended for use by children, pregnant or breastfeeding women, persons with or at risk of heart disease, high blood pressure or diabetes. If you have allergies or sensitivities to any type or combination of inhalants or are taking any sort of medication, consult professional medical advice before commencing use of vaping products.

For more guides, hints and tips; visit www.eCigWorld.com.au